



HUSKY
Portable
Containment

7202 SE International Court
P.O. Box 3404
Bartlesville, OK 74006
1-800-260-9950
918-333-2000
918-333-2004 Fax

Installation of Standard Bulkhead Fittings.

The bulkhead fitting supplied will consist of the bulkhead two gaskets and the nut. The nut is an NPT reverse thread. The inside threads are also NPT female threads.

INSTALLATION—

1. Find the location where you want the fitting to be installed. Usually lower towards the ground or surface the unit is sitting on. This allows for maximum drainage.
2. Remove the nut from the fitting and place it on the unit at the desired location. With a pencil or pen trace the inside diameter of the nut making a circle.
3. Using a pair of sharp scissors cut out the circle NOT going outside the line you created. (Tip; by using the very tip of the scissors makes it easier to stay on the line and reduces the chance for going outside of the line and damaging your unit.)
4. Still with the nut removed push the bulkhead fitting through the hole from the inside out. The material should slightly roll up the threads.
5. Thread the nut over the fitting and tighten.

Any questions call us at 1-800-260-9950