

BLADDER TANK INSTRUCTIONS

Do not fill the bladder beyond the dimensions and capacity that are provided

1. Remove your bladder from the box or other packaging, pallet, crate etc. that it may have been shipped in.
2. Place your bladder at desired location on ground tarp or in berm liner if applicable making sure the ground or surface it is being placed on is free of any debris, sharp rocks, sticks etc..
3. Unfold the bladder; there should be little or no wrinkles in the underside bladder surface that meets the ground. Be sure all valves, caps, plugs or vents are connected and in place before starting to fill.

CAUTION: If your bladder is being used for any type of fuel storage be sure the supplied vent is in place and operable. If there is no vent supplied or it is not functional contact the dealer you purchased the tank from or the manufacturer.

4. Close the outlet valves, if supplied and start filling with desired liquid.

CAUTION: Husky bladder tanks are not designed to be a pressure vessel. If you are going to fill your bladder tank with a pump source be sure you have an overflow valve or overflow fitting in place. Never hard pipe a pump to your bladder tank and leave it unattended while filling. Flexible, collapsible bladder tanks are not pressure vessels.

STORING YOUR BLADDER TANK:

5. After removing all liquid thoroughly, fold the bladder and put it in the storage bag or container that was provided. The material is rot and mildew resistant so some residual liquid left in the bladder will not hurt it. If there has been fuel in the bladder be sure to leave the valves open and store in a cool place.

CAUTION: The handles are designed for empty bladder tank maneuvering only.

CAUTION: Securing the bladder tank with the handles while there is any amount of liquid in the bladder tank will VOID the warranty.

Husky Portable Containment 1-800-260-9950/918-333-2000

“Leader of the Pack”

www.huskyportable.com

